

Nelson & District

CREDIT UNION  *Logically. Locally.*


Community Tent Care & Maintenance

Please review before using this community tent.

- CAUTION: Avoid use during heavy downpours and strong winds. Water may collect on tent tops in heavy rain. Water must be pushed off the top or its weight may collapse the tent. Water may leak through needle holes in fabric during constant or heavy rain.
- Always pack the tent top dry to prevent mildew.
- Please return the tent the next business day, after your event in order that we can prepare for other community groups requesting tents for their events. If a tent return is delayed due time required to dry-out, please let us know.
- Please report any damage or malfunctions. Any significant repairs may be charged back to your event or future use will be forfeited.

Instructions for Set Up & Take Down

Set up

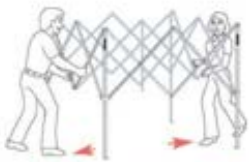

1. Grasp the lower "V" at the center. Lift and pull (frame halfway out).



2. Place fabric top on framework. Attach to each corner.



3. Attach hook and loop at each corner. Pull frame completely out.



4. Push leg socket out over the button on each leg.




5. Lift each leg until the button snaps into the first hole.



6. For height adjustment push leg buttons and slide up to any five holes.

Take Down

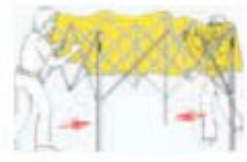

1. Lower legs. Push buttons at leg sockets. Push frame together half way.



2. Remove top from framework and fold.

At every opportunity possible, NDCU donates the use of our community tents for the enjoyment of local community groups in our service area. Possible uses of our community tents include community events, non-profit-group hosted events, large events and sporting events. Our community tents are not for individual use and, as we like to provide many groups with the opportunity to use them, we may limit an organization's use to once per year.